

ECHO Amplifier & Tape Switching Interface

FITTING INSTRUCTIONS

Switch off power to your Spectrum and unplug all leads. Into the back of your Spectrum, plug the ECHO leads as follows:-

ECHO	TO	SPECTRUM
Power Output		Power Input
Ear	RED TO RED	Ear
Mic	BLACK TO BLACK	Mic

The tape recorder should be connected as follows:

TAPE	TO	ECHO
Ear	TO	Ear
Mic	TO	Mic

The Spectrum power supply should now be plugged directly into the ECHO power socket. Switch on the power and your audible Spectrum is ready.

OPERATING INSTRUCTIONS

- AMPLIFY** Set the function switch to BEEP, and during operation, adjust the TONE and VOLUME controls to suit.
- LOAD** When loading programs from cassette, set the function switch to LOAD, set the cassette recorder volume control to MAX. Set the TONE and VOLUME to MAX. ie fully clockwise and load in normal manner.
- SAVE** When saving programs on cassette, set the function switch to SAVE. Set the TONE and VOLUME to MAX. ie fully clockwise and record in the normal manner.
- CUE** An audible cue facility exists to aid searching tapes for a specific program. Only tapes which have been saved with the cue facility switched in can be searched in this manner.

To use the CUE facility for giving a title to your programs, set the function switch to SAVE, switch the cassette recorder to RECORD, press the CUE button and speak clearly into the ECHO speaker. To use the CUE facility for searching, set the function switch to LOAD, and switch the cassette recorder to PLAY. The tape may then be monitored at any time by pressing the CUE button.

If you are dissatisfied with the product in any way whatsoever, please return it to the place of purchase within 14 days, where it will be replaced or a full refund given. Your statutory rights remain unaffected.

STONECHIP
ELECTRONICS

